


VACUUM BOX MOUNTING SUGGESTIONS FOR USE WITH ROTOMETRICS EJECTION STYLE CUTTING DIES

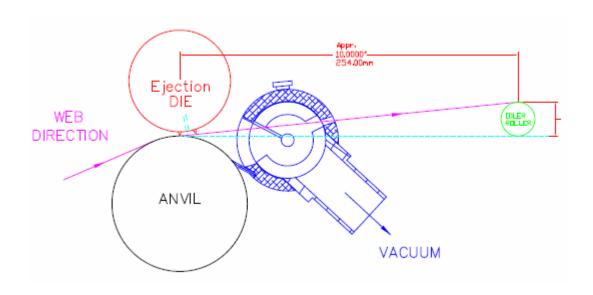

NOTES

- 1. Important to create anvil wrap with web on infeed side of anvil. This will secure web tightly against anvil surface.
- 2. To improve web ejection of part, web to be routed up slightly on the exit side of anvil.
- 3. Vacuum Box to be mounted close to ejection point.
- 4. Web to be routed thru box, adjustment screws allow passage door to be located for best collection results.

Rotometrics truly values the opinion and feedback of our customers. If you have suggestions or comments that would improve the use of this product, please feel free to share them with us at feedback@rotometrics.com.